




# STP Keystone Jack Instruction

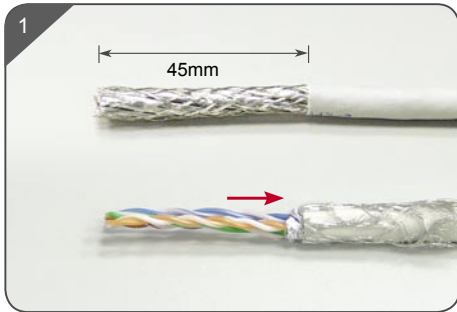


- Strip about 5.0cm of cable jacket.  
Roll back the copper braid when stripping the cable.  
Cut each pair's aluminum foil about 4.5cm.

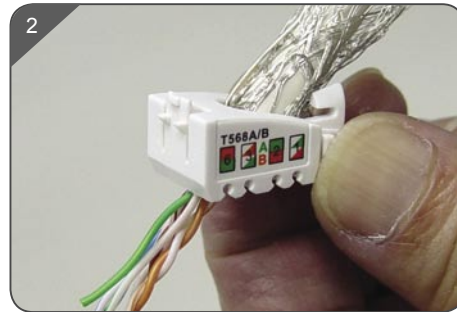


- According to color code, push each untwisted pair all the way down into the cap slots.

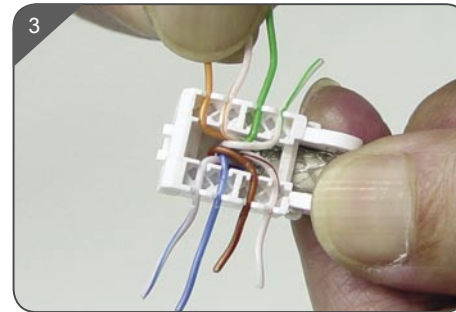


- Arrange the wires.

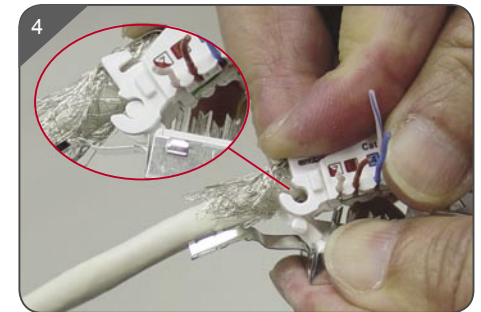


- Join the cap axis hole with the axis beam of the housing; the wired cap can rotate back and forth.

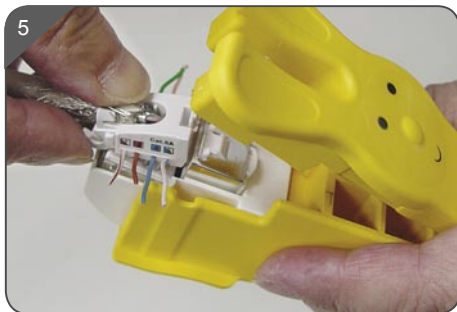


- Put keystone into holder

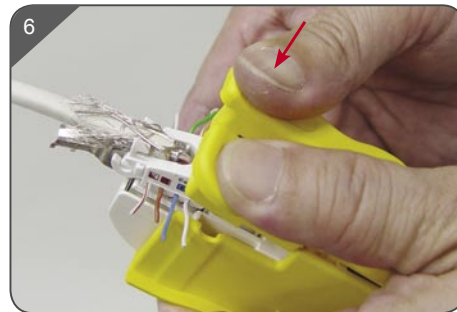


- Clamp down.

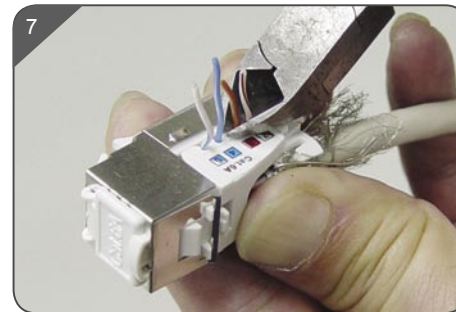


- Cut off redundant wires edgways.

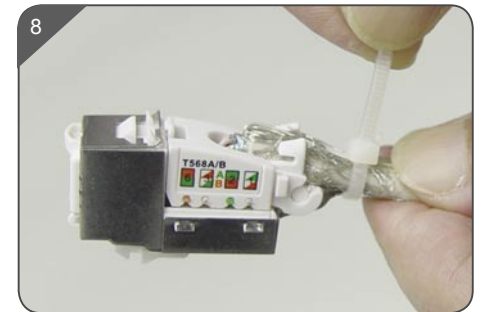


- Place the cable-tie through cap ring, and cut the tail after tied up the cable.

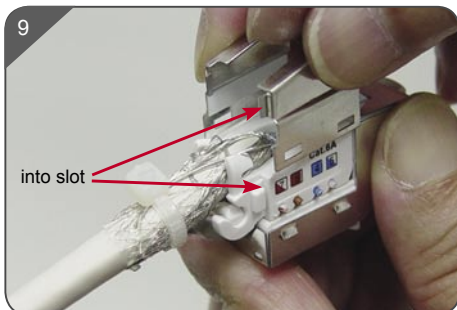

- Place shield guides into the wired-cap slot.

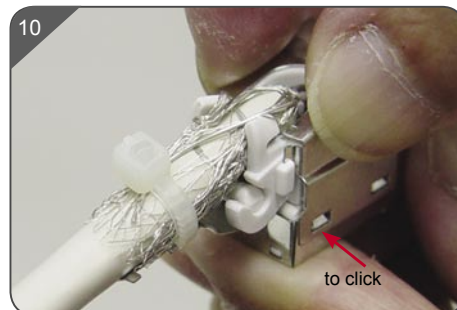

- Push to click shield knobs into the shield base.

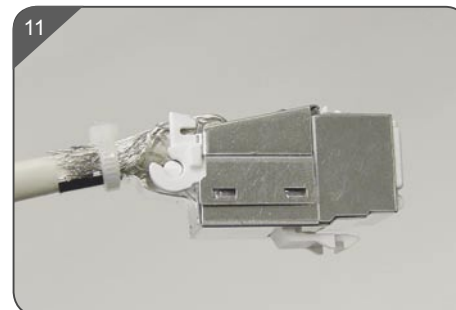

- Complete termination.



- Clamping tool.

